

Remote Control Dual 3-Prong Outlet Switch

Product Description

ETL Listed Outdoor/Indoor Control 3-Prong Outlet Switch with Wireless Remote, Weather Proof Heavy Duty 15 AMP Compact 2 Grounded Outlets with 6-inch Cord and 80ft remote control Range in Black.



Product Features

- Remote control has an 80ft range in open area
- Easily switch with the on and off buttons on the remote control
- Power output up to 1875W at 125V(60Hz)
- Low power consumption, reduces energy and extends product life by up to 15%
- Manual pairing and unpairing
- For indoor/outdoor use

Specification

Plug-in Remote Control
 Voltage: 125VAC, 60Hz
 Max. load: 15A Resistive or General purpose,
 10A/1250W Tungsten, 1/2HP
 Remote battery: CR2032 3V
 Radio frequency: 433.92MHz
 Operation distance: Up to 80ft in the open
 area.

Package Contents

- Dual 3-Prong Outlet Switch x 1
- Remote Control (1x Battery included) x 1
- User Manual x1

Pairing and Unpairing

Activate pairing mode by holding the ON/OFF switch on the outlet switch for 7-10 seconds until the power indicator light slowly flashes. Note: Pairing mode will be canceled if there is no action for 20 seconds.

Pairing

1. Activate pairing mode.
2. Press the ON button on the remote once. Successful pairing is indicated by the power indicator light on the outlet switch remaining constantly on.

Unpairing

1. Activate pairing mode.
2. Press the ON/OFF button on the outlet switch once to unpair. Successful unpairing is indicated by the power indicator light on the outlet switch remaining constantly on.

Troubleshooting

1. Ensure the remote control battery is working.
2. Plug the outlet switch into a GFCI-protected receptacle. Ensure the power indicator light is lit.
3. Please re-pair them if the remote doesn't work with the outlet switch.
4. If it causes interference to radio or television reception (which can be determined by turning the equipment off and on), try the following measures:
 - (1). Reorient or relocate the receiving antenna.
 - (2). Increase the separation between the outlet switch and receiver.
 - (3). Connect the outlet switch and the receiver to different outlets.

WARNINGS

The outlet switch must be mounted in a vertical position with outlets facing downward and be at least 43.3 in. (1.1 m) above ground. Do not mount where water will splash or drip onto the receptacle.

Risk of Electric Shock and Fire

1. Keep children away.
2. Do not connect two or more outlet switches to the same outlet.
3. Ensure the appliance is fully inserted into the outlet switch.
4. Remove the outlet switch from mains power and wipe it with a dry cloth when cleaning.
5. Do not immerse the outlet switch in water or any other liquid.
6. Don't plug in an appliance where the load exceeds rated capacity.
7. Do not use with extension cords.
8. Do not use with appliances that contain heating elements (cooking appliances, heaters, irons, etc.).

Copyright and Trademarks

Specifications are subject to change without notice. Cable Matters is a registered trademark or trademark of Cable Matters Inc. All rights reserved. All other trademarks are the property of their respective owners.

Limitation of Liability

In no event shall Cable Matters Inc. (including their officers, directors, employees or agents) be liable for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of, or related to the use of this product exceeding the actual price paid for the product (as allowed by state law).

Warranty Information

This product is backed by a limited one-year warranty. The warranty covers parts and labor costs only. Cable Matters does not warrant its products from defects or damages arising from misuse, abuse, or normal wear.

Customer Support and Contact Information

Cable Matters offers lifetime technical support as an integral part of our commitment to provide industry leading solutions.

Email us with any questions at support@cablematters.com.

www.cablematters.com