

Termination Cap

Cable Pair Colors

- W White
- G Green
- O Orange
- BL Blue
- BR Brown

1	2	3	4	5	6	7	8
W-G	G	W-O	BL	W-BL	O	W-BR	BR


Designation T568A 8-Position jack pin/pair assignments

1	2	3	4	5	6	7	8
W-O	O	W-G	BL	W-BL	G	W-BR	BR

Designation T568B 8-Position jack pin/pair assignments

568B Wiring Example


- 1 Trim the cable jacket back about 2 inches

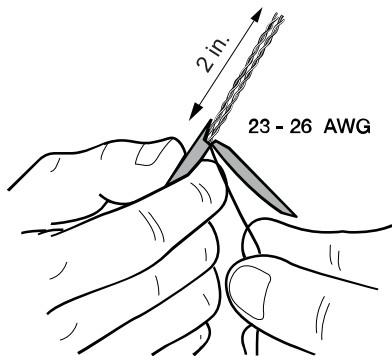

- 2 Insert the cable through the termination cap and dress the wires as shown

Pair 5 - 4
W/BL - BL

Pair 3 - 6
W/GR - GR


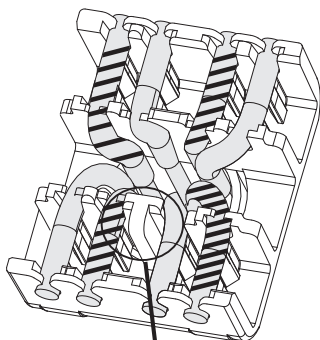


Pair 8 - 7
BR - W/BR



Pair 2 - 1
OR - W/OR

KEY



- 3 Trim the wires as close as possible

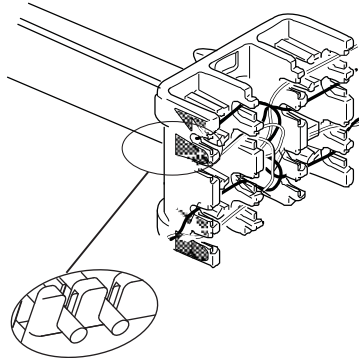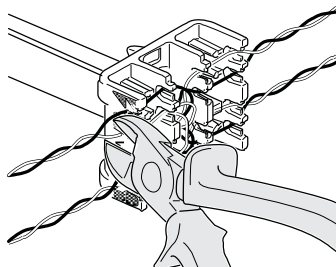


- 4 Line up the cap with the inside of the keystone jack and press firmly
- Tightly close the doors on each side of the keystone jack until they lock into place

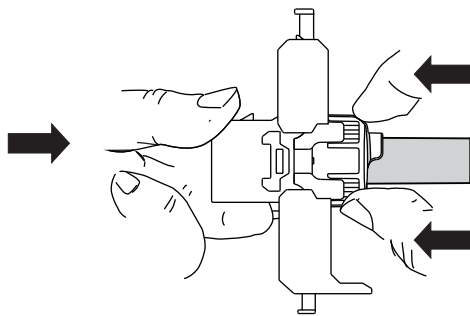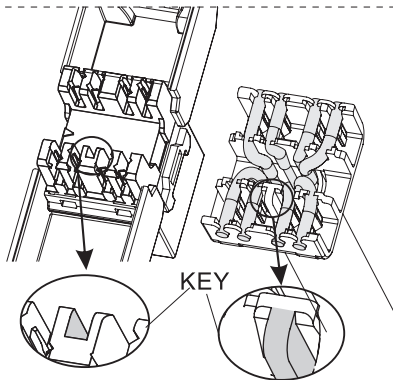

- 5 Secure the keystone jack with the included cable tie.

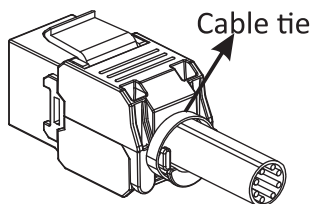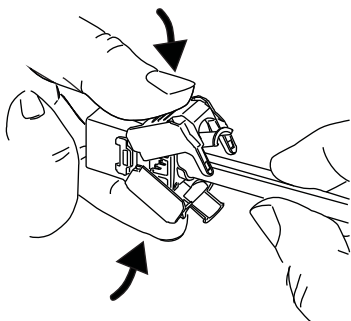

Keystone Jack Punch-Down Stand Usage Instructions

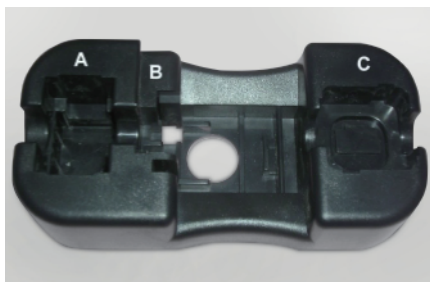

Select the correct slot

A: 180-Degree

B: 90-Degree

C: Australian Style

Models:
• 180014
• 180065


A

Models:
• 180005
• 180070

B

Australian Style

C

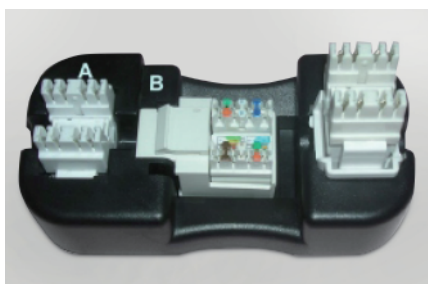


90-Degree Keystone Jack Instructions



1



2

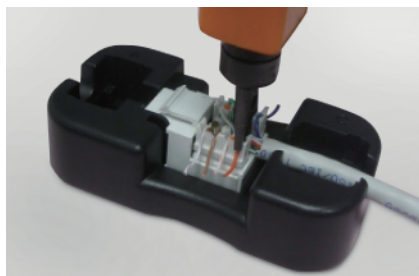

3



4

1. Press the KJ against the latch in position B
2. Snap the KJ securely into place
3. Dress and terminate the wires
4. Push from the bottom opening to remove

180-Degree Keystone Jack Instructions



1. Insert the KJ into position A
2. Snap the KJ securely into place
3. Dress and terminate the wires
4. Carefully remove the KJ