
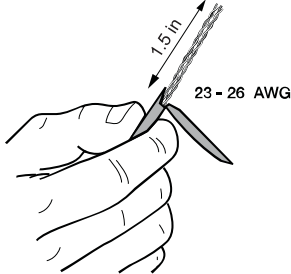


90-Degree Keystone Jack Termination Instructions

Model No.180070

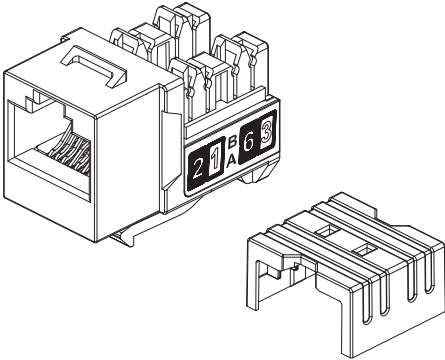

Legend

W	White
G	Green
O	Orange
BL	Blue
BR	Brown

1	2	3	4	5	6	7	8
W-G	G	W-O	BL	W-BL	O	W-BR	BR


Designation T568A 8-Position jack pin/pair assignments

1	2	3	4	5	6	7	8
W-O	O	W-G	BL	W-BL	G	W-BR	BR


Designation T568B 8-Position jack pin/pair assignments

Crimp Tool Instructions (Model 180069)

1.

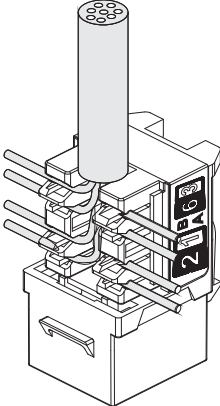

2.

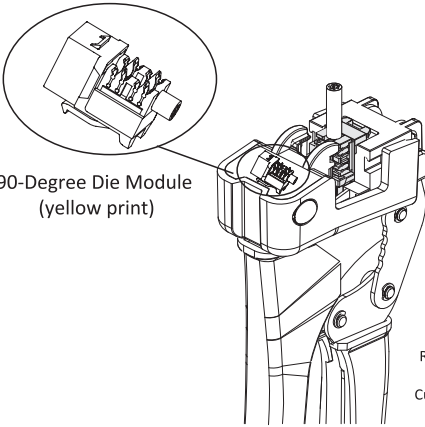


90-Degree Die Module (yellow print)


RJ45 Crimp Tool for Keystone Jacks
Cut and terminate wires in one step.

110 Impact Tool Instructions

1.

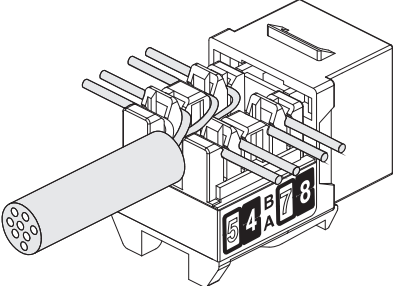


2.

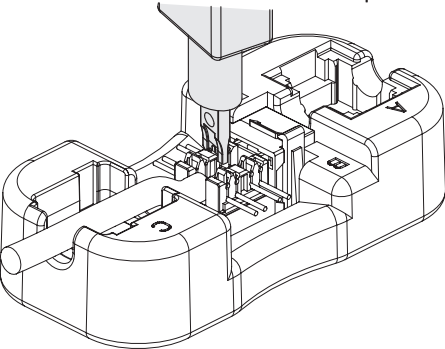


110 Impact Tool

3.

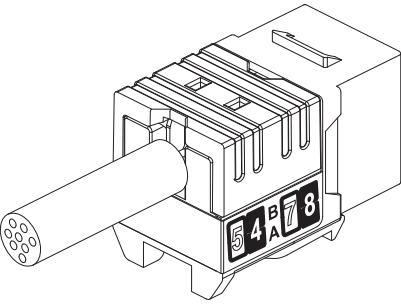

Snap on the cap.

Keystone Jack Punch-Down Stand Usage Instructions

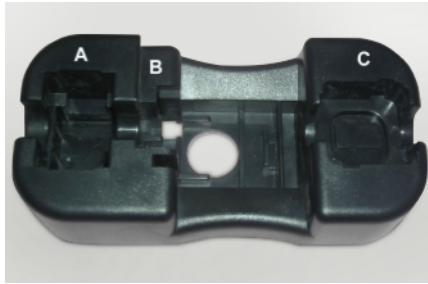

Select the correct slot

A: 180-Degree

B: 90-Degree

C: Australian Style

Models:
• 180014
• 180065


A

Models:
• 180005
• 180070

B

Australian Style

C

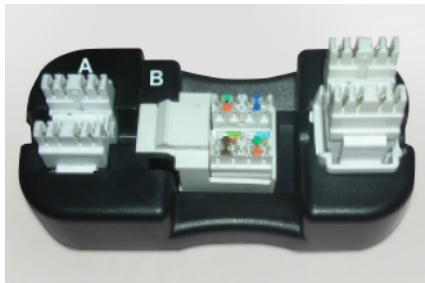


90-Degree Keystone Jack Instructions



1



2

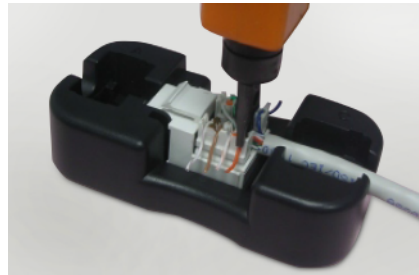

3



4

1. Press the KJ against the latch in position B
2. Snap the KJ securely into place
3. Dress and terminate the wires
4. Push from the bottom opening to remove

180-Degree Keystone Jack Instructions



1. Insert the KJ into position A
2. Snap the KJ securely into place
3. Dress and terminate the wires
4. Carefully remove the KJ