



INSTALLATION INSTRUCTIONS

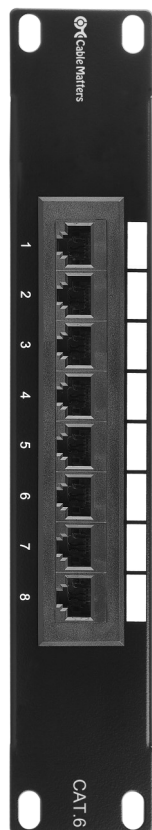

1

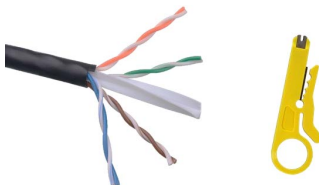



- ♦ Strip about 1.5 inches of the cable jacket, trim the spine, and separate the pairs

3



- ♦ Untwist each wire pair about 1/2"
- ♦ Keep the twists as tight as possible
- ♦ Insert the cable pairs into the IDC terminals
- ♦ Terminate the cable with either a Krone or 110 impact tool
- ♦ Orient the tool with the **CUT** side on the outside

4

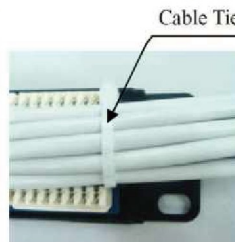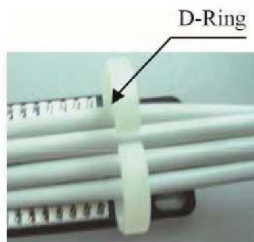


- ♦ Dress the cables pair to feed through the top and bottom and secure with wire ties for the best cable management
- ♦ Install the mount on the patch panel
- ♦ Mount the patch panel to the wall

5




- ♦ Fix the mounts on the Aluminum shelf with the screws
- ♦ Then mount the panel to the two mounts

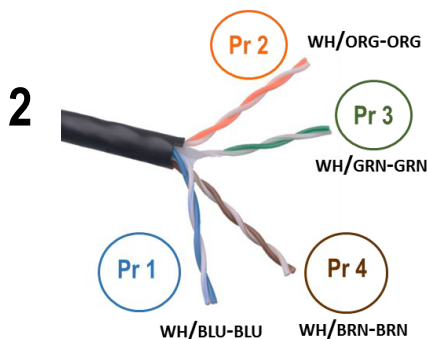

568B Wiring Shown

- UNSHIELDED 10 INCH VERTICAL PATCH PANEL
- 110 OR KRONE COMPATIBLE IDC TERMINALS
- SUPPORTS 568A AND 568B WIRING
- CATEGORY 6 TIA/EIA 568-C.2 PERFORMANCE
- SUPPORTS 22-26 AWG SOLID OR STRANDED WIRE

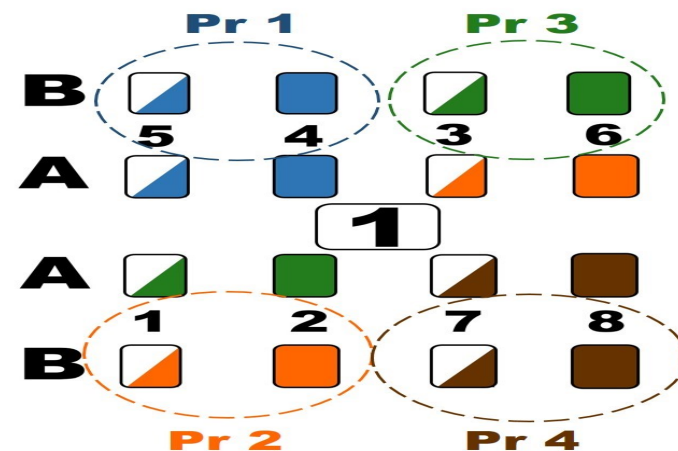

GOVERNMENT USE

COMMERCIAL/RESIDENTIAL USE

T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown