




Use two #6 sheet metal screws (not included).
Screw heads should protrude about 1/8".

Surface Mount Template

Print at 100%

Use this template to mount the surge protector on any surface with screws

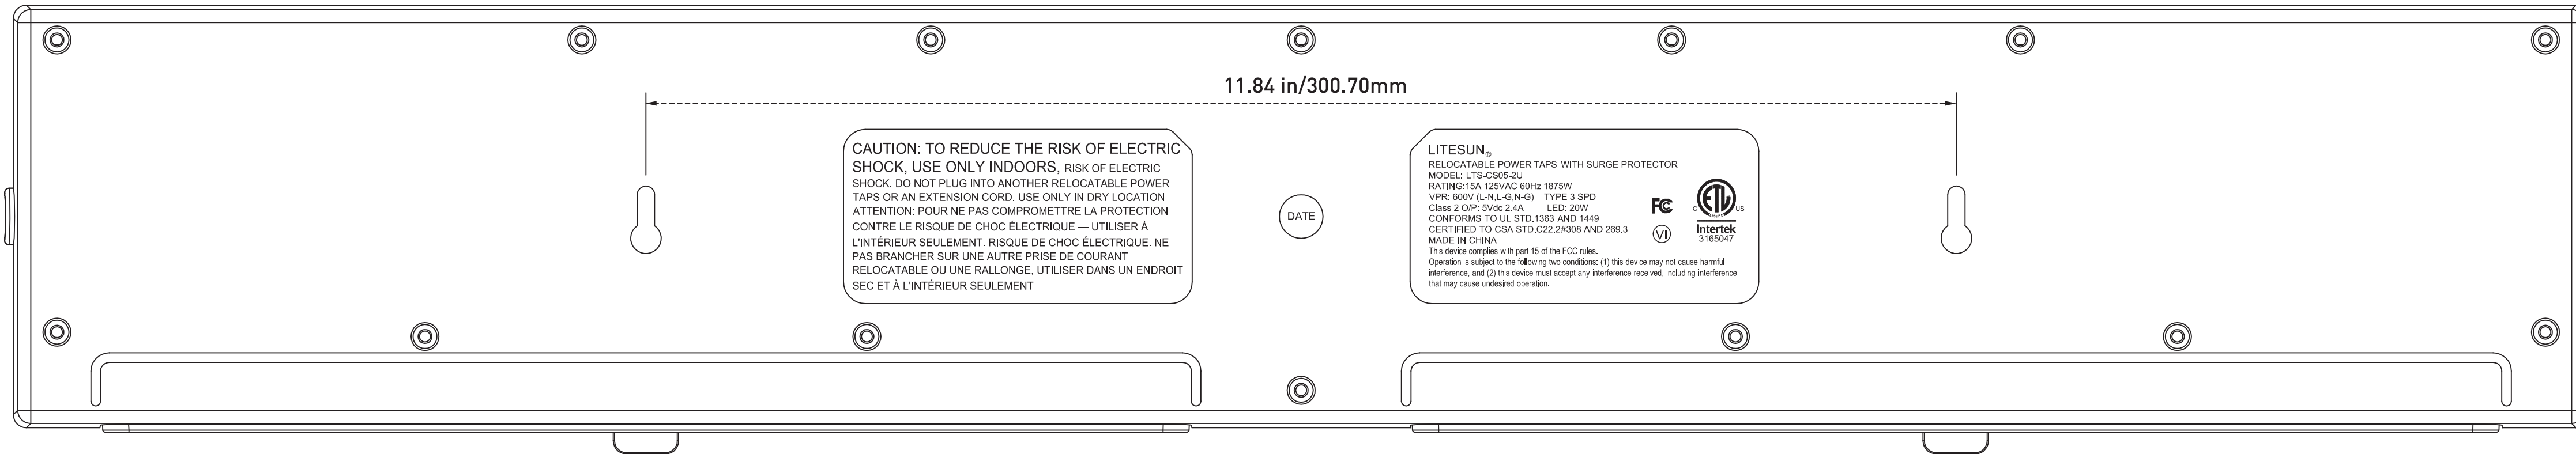

support@cablematters.com